

Standard PMS Menu for All Changan Models

Alsvin, CS15, CS35 Plus, CS55 Plus, X7, Uni-T, Uni-K

	MAINTENANCE ITEMS	MAINTENANCE INTERVALS Number of months or driving distance, whichever comes first									
		Months									
		3	9	15	21	27	33	39	45	51	57
		Kms x 1,000									
		5	15	25	35	45	55	65	75	85	95
POWERTRAIN	Drive belts*1		I	I	I	I	I	I	I	I	I
	Engine oil and engine oil filter *2	R	R	R	R	R	R	R	R	R	R
	Engine coolant	I	I	R	I	R	I	R	I	R	I
	Manual transmission fluid (if equipped)	Replace every 55,000 km									
	Automatic transmission fluid (if equipped)	Replace every 55,000 km									
	Dual clutch transmission fluid (if equipped)	Replace every 55,000 km									
	Power transfer unit oil(4WD) (if equipped)	Replace every 55,000 km									
	Cooling system (lines, hoses and connections)	I		I		I		I		I	
	Air filter	I	I	R	I	R	I	R	I	R	I
FUEL SYSTEM	Fuel lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
	Fuel filter(Euro V)	R	R	R	R	R	R	R	R	R	R
	Fuel filter(Euro VI)	Replace every 75,000 km									
IGNITION SYSTEM	Spark Plugs	I	I	R	I	R	I	R	I	R	I
CHASSIS AND BODY	Brake/Clutch fluid	I	I	I	R	I	I	R	I	I	R
	Parking brake	I	I	I	I	I	I	I	I	I	I
	Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I	I
	Disc brakes and pads	I	I	I	I	I	I	I	I	I	I
	Steering gear rack, linkage and boots	I	I	I	I	I	I	I	I	I	I
	Driveshaft and boots	I	I	I	I	I	I	I	I	I	I
	Tire (pressure & tread wear)	I	I	I	I	I	I	I	I	I	I
	Front suspension ball joints	I	I	I	I	I	I	I	I	I	I
	Bolt and nuts on chassis and body	I	I	I	I	I	I	I	I	I	I
ELECTRICAL APPLIANCE	Wiring harness, connections and lamps	I	I	I	I	I	I	I	I	I	I
AIR CONDITIONING	Air conditioner refrigerant	I	I	I	I	I	I	I	I	I	I
	Compressor/Condensor/Evaporator	I	I	I	I	I	I	I	I	I	I
	Climate control air filter (if equipped)	I	I	R	I	R	I	R	I	R	I
	A/C lines and connections	I	I	I	I	I	I	I	I	I	I
	A/C Cleaning	I	I	C	I	C	I	C	I	C	I



I: Inspect and if necessary, adjust, correct, clean or replace.

R: Replace

C: Cleaning

*1: Adjust alternator and power steering (and water pump drive belt) and air conditioner drive belt (if equipped). Inspect and if necessary correct or replace.

*2: Check the engine oil level and leak every 500 km or before starting a long trip.